

*METEK

21000 Series Size 8 Double Stack Hybrid Linear Actuators

Size 8 Double Stack Hybrid Stepper Motor Linear Actuators provide enhanced performance over a single stack.

Improved Performance & New Linear Motion Design Opportunities in a 20 mm Frame Size

3 Available Designs

- Captive
- Non-Captive
- External Linear

The 21000 Series is available in a wide variety of resolutions - from 0.000098 in (.0025 mm) per step to 0.00157 in (0.04 mm) per step. The Size 8 actuator delivers thrust of up to 17 lbs. (75 N).

Assembly options include: Incremental encoders, proximity sensors (captive types only), anti-backlash and custom nuts, and TFE coated lead-screws.



Specifications

Size 8 Double Stack: 21 mm (0.8-in) Hybrid Linear Actuator (1.8° Step Angle)				
	Captive 21M4 — — — †		- †	
Part No.	Non-Captive	21L4 — — — †		
	External Linear	E21M4 — — — — [†]		
Wiring		Bipolar		
Winding Voltage	2.5 VDC	2.5 VDC 5 VDC 7.5 VDC		
Current (RMS)/phase	1.32 A .65 A .43 A		.43 A	
Resistance/phase	1.9 Ω 7.7 Ω 17.3 Ω		17.3 Ω	
Inductance/phase	0.8 mH 3.2 mH 6.1 mH			
Power Consumption	6.5 W Total			
Rotor Inertia	2.6 gcm ²			
Insulation Class	Class B (Class F available)			
Weight	2.4 oz (43 g)			
Insulation Resistance	20 ΜΩ			

on page 4
on page 4


Linear Tra	vel / Step		
Screw Ø.14-in (3.56mm)		Order Code I.D.	
inches	mm	Oode i.b.	
.000098*	.0025	AA	
.00012	.0030*	N	
.00019*	.005	AB	
.00024	.006*	K	
.00039*	0.01	AC	
.00048	.0121*	J	
.00078*	.02	AD	
.00157*	.04	AE	
.00157	.04	AE	

*Values truncated Standard motors are Class B rated for maximum temperature of 130°C

Special drive considerations may be necessary when leaving shaft fully extended or fully retracted.

www.haydonkerkpittman.com


Captive Lead Screw

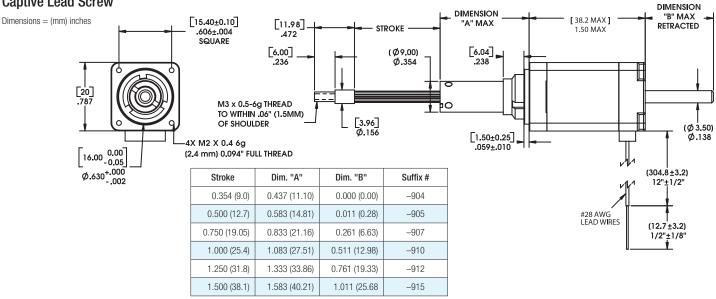

Non-Captive Lead Screw

Dimensions = (mm) inches




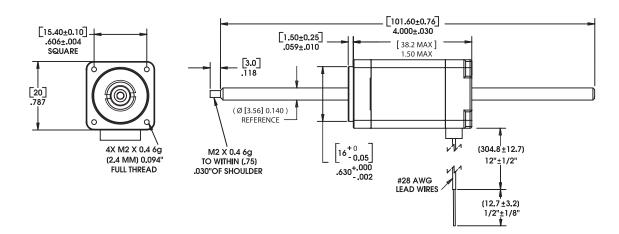

External Linear

Dimensions = (mm) inches

Up to 6 in (152 mm) standard screw lengths. Longer screw lengths are available.

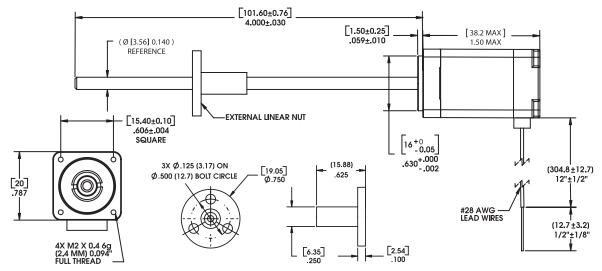

www.haydonkerkpittman.com **AMETEK**

21000 Series • Size 8 Double Stack Stepper Motor Linear Actuators

FORCE vs. PULSE RATE


- Chopper

- Ø .14 (3.56) Lead Screw

- Bipolar

- 8:1 Motor Coil to Drive Supply Voltage

- 100% Duty Cycle

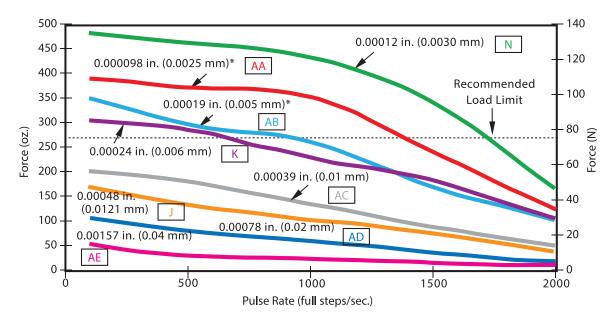

FORCE vs. LINEAR VELOCITY


Chopper

 $- \emptyset$.14 (3.56) Lead Screw

Bipolar

- 8:1 Motor Coil to Drive Supply Voltage

- 100% Duty Cycle

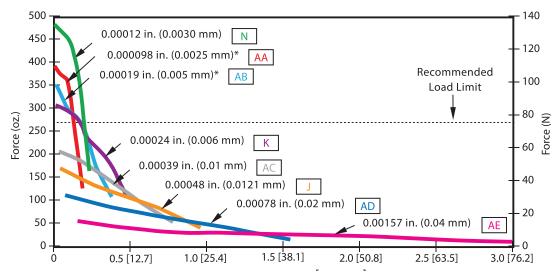

*Care should be taken when utilizing these screw pitches to ensure that the physical load limits of the motor are not exceeded. Please consult the factory for advice in selecting the proper pitch for your application. Ramping can increase the performance of a motor either by increasing the top speed or getting a heavier load accelerated up to speed faster. Also, deceleration can be used to stop the motor without overshoot.

NOTE: All chopper drive curves were created with a 5 volt motor and a 40 volt power supply.

With L/R drives peak force and speeds are reduced, using a unipolar drive will yield a further 30% force reduction.

www.haydonkerkpittman.com


3

Identifying the Hybrid Part Number Codes when Ordering

Е	21	M	4	N	2.5	910
Prefix	Series Number	Style	Coils	Code ID Resolution	Voltage	Suffix
(include only when	Designation	L = 1.8°	4 = Bipolar	Travel/Step	2.5 = 2.5 VDC	Stroke
using the following)	21 = 21000	Non-captive	(4 wire)	AA *= .000098-in (.0025)	05 = 5 VDC	Example: $-910 = 1$ -in
A = A Coil (See AC	(Series numbers represent	M = 1.8°Captive or		N = .00012-in (.0030)	7.5 = 7.5 VDC	(Refer to Stroke chart on Captive motor series product page.)
Synchronous	approximate	External (use "E" or "K" Prefix		AB = .00019 - in (.005)	Custom V available	,
Data Sheet)	width of motor	for External		K = .00024-in (.006)		Suffix also represents:
E = External	body)	version)		AC = .00039 - in (.01)		-800 = Metric
K = External with 40° thread		,		J = .00048-in (.0121)		-900 = External Linear with grease and flanged nut
form				AD = .00078 - in (.02)		0
P = Proximity				AE = .00157-in (.04)		-XXX = Proprietary suffix assigned to a specific customer
Sensor				*TFE not available		application. The identifier
						can apply to either a standard or custom part.

NOTE: Dashes must be included in Part Number (-) as shown above. For assistance call our Engineering Team at 203 756 7441.

Hybrids: Wiring

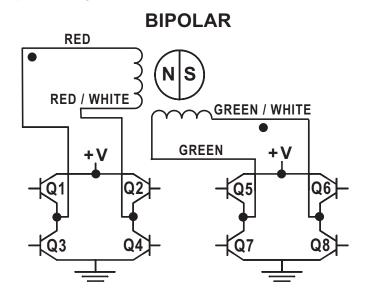

Hybrids: Stepping Sequence

Bipolar	Q2-Q3	Q1-Q4	Q6-Q7	Q5-Q8	
Step					1
1	ON	OFF	ON	OFF	
2	0FF	ON	ON	OFF	CCW
3	OFF	ON	OFF	ON	ACT
4	ON	OFF	OFF	ON	RETRACT
1	ON	OFF	ON	OFF	æ
	Step 1 2	Step 1 ON 2 OFF 3 OFF 4 ON	Step 1 ON OFF 2 OFF ON 3 OFF ON 4 ON OFF	Step 1 ON OFF ON 2 OFF ON ON 3 OFF ON OFF 4 ON OFF OFF	Step ON OFF ON OFF 2 OFF ON ON OFF 3 OFF ON OFF ON 4 ON OFF OFF ON

Note: Half stepping is accomplished by inserting an off state between transitioning phases.

Integrated Connector for Hybrid Size 8 Double Stack

Offered alone or with a harness assembly, this connector is RoHS compliant and features a positive latch in order for high connection integrity. The connector is rated up to 2 amps and the mating connector will handle a range of wire gauges from 24 to 28. Ideal for those that want to plug in directly to pre-existing harnesses.

Motor Connector:

JST part # S04B-ZESK-2D

Mating Connector:


JST part # ZER-04V

Haydon Kerk Part # 56-2369-1 (12 in. Leads)

Wire to Board Connector:

JST part # SZE-002T-P0.3

Pin #	Bipolar	Color
1	Phase 2 Start	G/W
2	Phase 2 Finish	Green
3	Phase 1 Finish	R/W
4	Phase 1 Start	Red

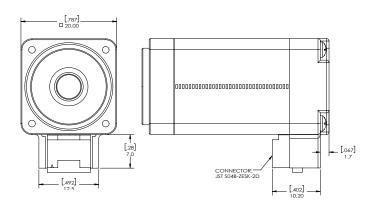


www.haydonkerkpittman.com

Encoders Designed for All Sizes of Hybrid Linear Actuators

All Haydon Hybrid Linear Actuators are available with specifically designed encoders for applications that require feedback. The compact optical incremental encoder design is available with two channel quadrature TTL squarewave outputs. An optional index is also available as a 3rd channel. The Size 8 Encoder provides resolutions for applications that require 250 and 300 counts per revolution. Encoders are available for all motor configurations — captive, non-captive and external linear.

Simplicity and low cost make Encoders ideal for both high and low volume motion control applications. The internal monolithic electronic module converts the real-time shaft angle, speed, and direction into TTL compatible outputs. The encoder module incorporates a lensed LED light source and monolithic photodetector array with signal shaping electronics to produce the two channel bounceless TTL outputs.

21mm 21000 Series Size 8

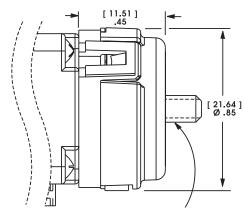

NOTE: Lead Screw extends beyond encoder on specific captive and non-captive motors. External linear shaft extension is available upon request.

Single Ended Encoder - Pinout - Size 8			
Connector Pin #	Description		
1	+5 VDC Power		
2	Channel A		
3	Ground		
4	Channel B		



Electrical Specifications				
	Minimum	Typical	Maximum	Units
Input Voltage	4.5	5.0	5.5	VDC
Output Signals	4.5	5.0	5.5	VDC

² channel quadrature TTL squarewave outputs.

Channel B leads A for a clockwise rotation of the rotor viewed from the encoder cover.

Tracks at speeds of 0 to 100,000 cycles/sec.

Optional index available as a 3rd channel (one pulse per revolution).

Operating Temperature					
Size 8	Minimum	Maximum			
3126 0	- 10°C (14°F)	85°C (185°F)			

Mechanical Specifications		
	Maximum	
Acceleration	250,000 rad/sec2	
Vibration (5 Hz to 2 kHz)	20 g	

Resolution				
4 Standard Cycles Per Revolution (CPR) or Pulses Per Revolution (PPR)				
Circ 9 CPR 250 300				
Size 8	PPR	1000	1200	

www.haydonkerkpittman.com



Encoder Ready Option Shown 34000 Series Size 17



Extended Rotor Journal Shown 34000 Series Size 17





@AMETEK, Inc. All rights reserved. Not responsible for any typographic errors. Specifications subject to change. MCM2018_041D_091322

Encoder Ready Option for all Hybrid Sizes

Our Hybrid Linear Actuators can now be manufactured as an Encoder Ready Actuator. Encoder Ready Actuators can be used to install several popular hollow shaft encoders. Available with an extended rotor journal and a threaded rear housing. The motor uses a proprietary manufacturing process which incorporates engineering thermoplastics in the rotor drive nut and a stainless steel Acme Lead Screw that allows the motor to be much more efficient and durable than today's more commonly used V-thread bronze nut configurations.

Extended Rotor Journal for all Hybrid Sizes

Available with an extended rotor journal. The extended rotor journal can be used for encoder installation, manual adjustment, or flag installation for a positioning sensor.

Home Position Switch for Hybrids

A miniature electronic Home Position Switch capable of monitoring the home positions of linear actuators. The switch mounts on the rear sleeve of captive linear motors and allows the user to identify start, stop or home positions.

When ordering motors with the home position switch the part number should be preceded by an "S" prefix.

End of Stroke Proximity Sensor for all Hybrid Sizes

The Sensor incorporates a hall effect device, which is activated by a rare earth magnet embedded in the end of the internal screw. The compact profile of the sensor allows for installation in limited space applications. The sensor has a virtually unlimited cycle life. Special cabling and connectors can also be provided.

When ordering motors with the proximity sensor, the part number should be preceded by a "P" prefix.

Black Ice® and Kerkote® TFE Coated Lead Screws*

TFE Coated Lead Screws for applications that require a greaseless screw and nut interface.

A dry (non-lubricated) TFE coated lead screw provides improved performance in both life and thrust as compared to a conventional stainless steel lead-screw. TFE can be applied to a wide variety of lead-screw pitches and is available for our brand captive, non-captive and external linear actuators. Not available for 0.00006-in (.0015 mm) and 0.000098-in (.0025 mm) resolutions.

*Certain conditions apply.

Integrated Anti-Backlash Nut for Hybrids*

Most sizes (except Size 34) of our captive and non-captive hybrid stepper motors can be equipped with an integral anti-backlash feature. There is a normal backlash between the lead screw and integral rotor nut.

Our actuators are designed for millions of cycles. However over time, additional backlash could increase and eventually double. Haydon Kerk Integrated Anti-Backlash Nut can eliminate all backlash. Designed specifically for our captive and non-captive hybrid motors, nuts use an opposing spring force to eliminate backlash between the screw and the nut interface. The nuts will self-compensate and accommodate any wear. Haydon Kerk Motion Solutions application engineers can help you select the appropriate preload for your application

*Except Size 34.

www.havdonkerkpittman.com

